





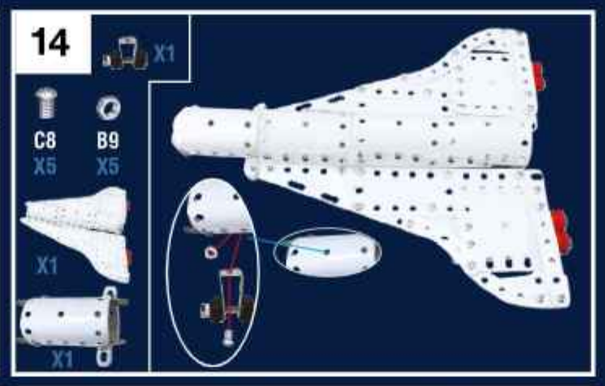

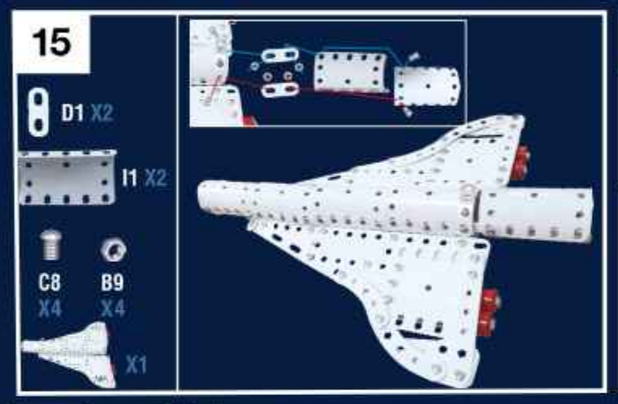

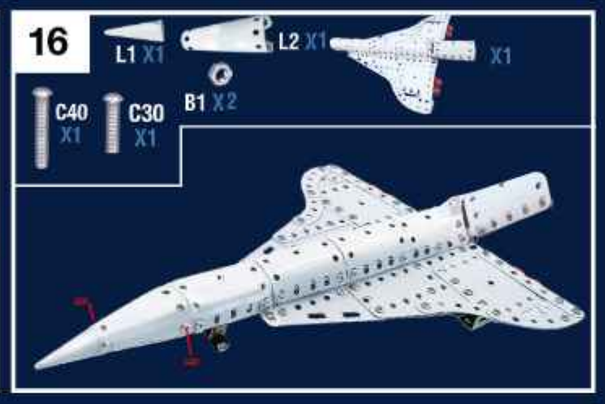



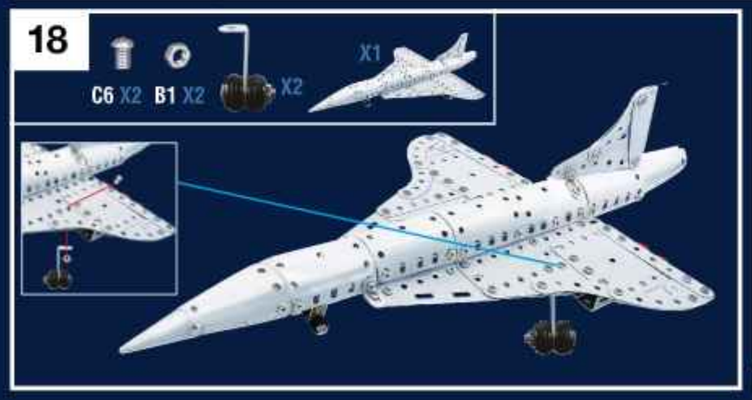



CONCORDE

G-BBDG

METAL CONSTRUCTION SET


INSTRUCTIONS



UK DESIGN

BROOKLANDS MUSEUM

262 PIECES





COACH HOUSE PARTNERS

CUSTOMER CARE: Our construction sets are hand packed so from time to time you may find you have too many pieces, and sometimes unfortunately too few. If you are missing a piece(s) please email customercare@chpgb.co.uk with a list of the parts and their part number along with your name and full address. We will aim to send you the missing piece(s) within 48 hours from receipt of your email.

Please email customercare@chpgb.co.uk if you require large step instructions and we will send you a PDF copy.

Design number: 6029427

1

F1 X2 G3 X2 G4 X2 C6 X2 B1 X2



2

I1 X1 D4 X2 C6 X2 B1 X2



3

C6 X4 B1 X4 D3 X2 J3 X4 I1 X2



4

K1 X4 C6 X8 C12 X4 B1 X12 D2 X2 D3 X4 E1 X4



X2 Make two of this step

5

F1 X2 G1 X1 G2 X1 F2 X1 G5 X1 G4 X2 C6 X10 B1 X10 G6 X1




6

F1 X2 G1 X1 G2 X1 F2 X1 G5 X1 G4 X2 C6 X10 B1 X10 G6 X1



7

C20 X2 B1 X2 X1

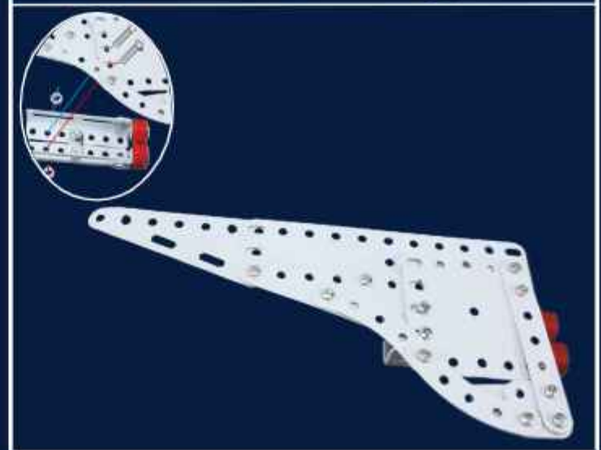


8

C20 X2 B1 X2 X1




9

D4 X4 C6 X8 B1 X8 I1 X3 X1

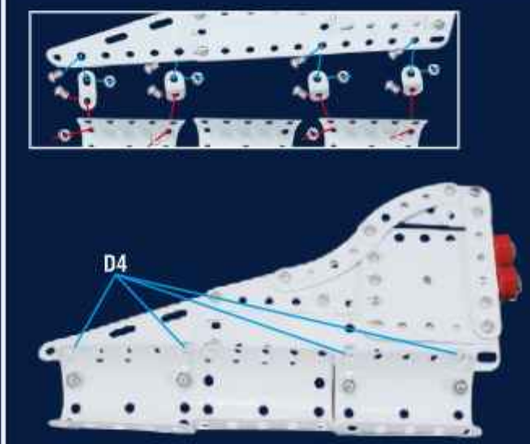

10


D4 X4 X1 C6 X8 B1 X8

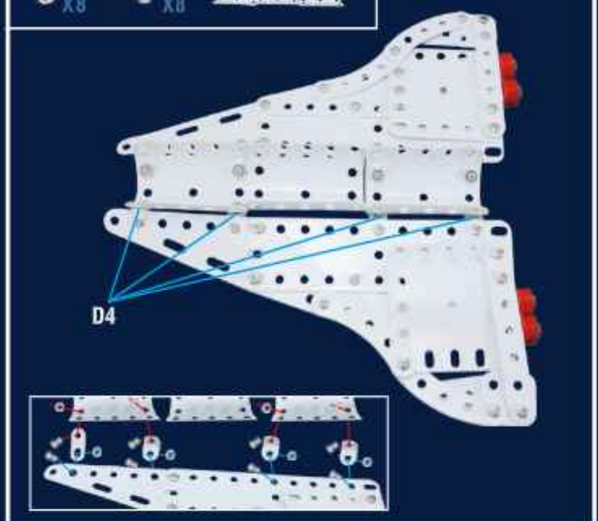

11

X1 I1 X2 F3 X2 X1 C6 X8 B1 X8

Place the x2 F3 pieces between the 3 bottom curved pieces and 3 top curved pieces and fix at the points marked below to secure all pieces. Pull the body together to insert screws. Use screwdriver to align holes.

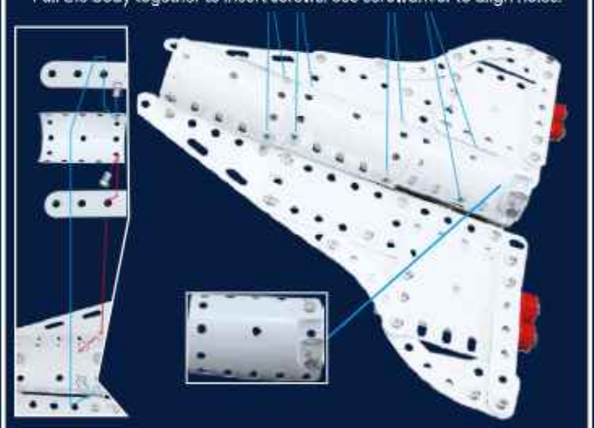

12

D6 X2 K2 X4 C20 X2 B1 X2

X2
Make two of this step



I





2


I1 X1


D4 X2


C6 X2


B1 X2



3













X2 Make two of this step

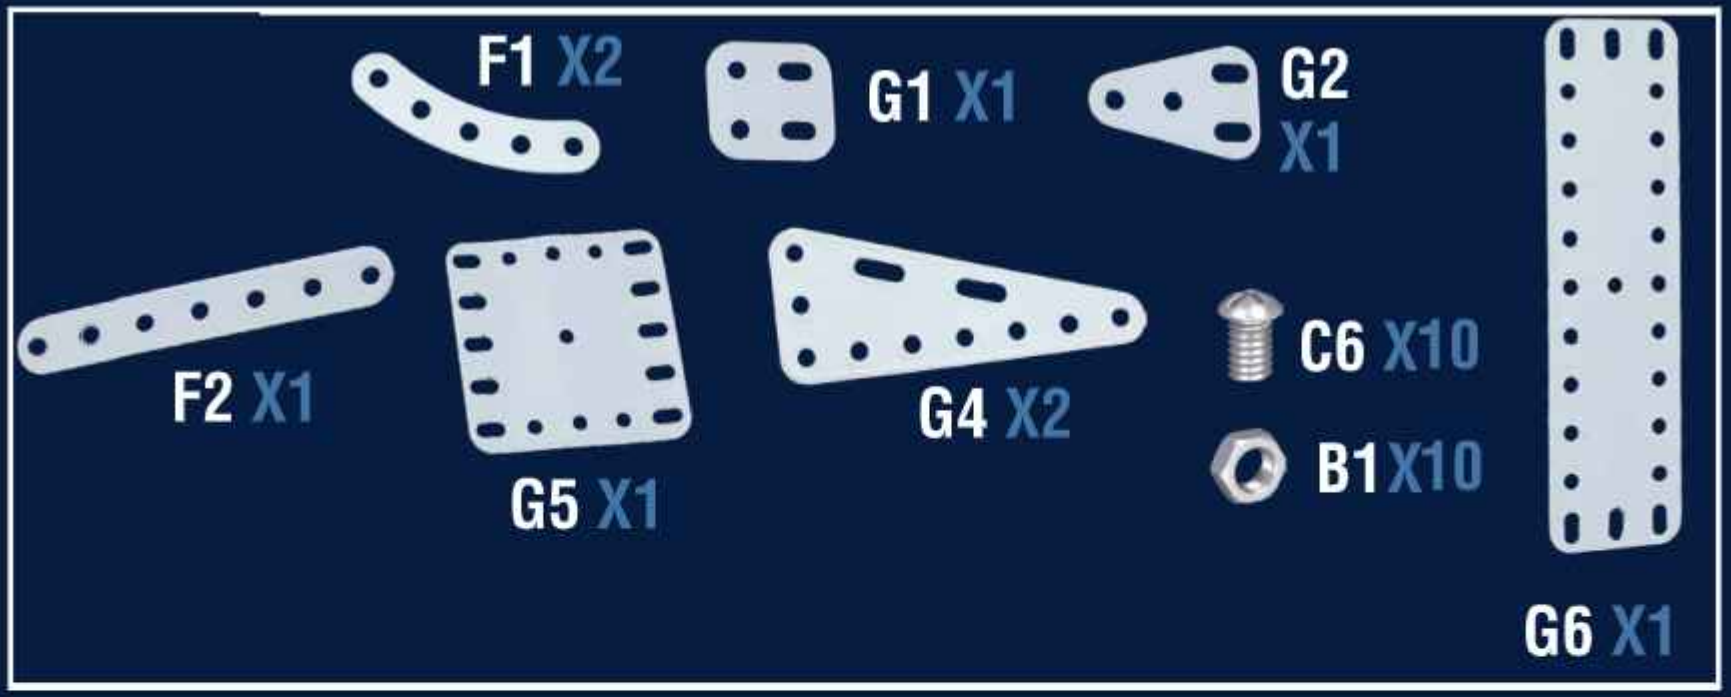
F1 X2
G1 X1
G2
X1
F2 X1
G5 X1
G4 X2
C6 X10
B1 X10
G6 X1

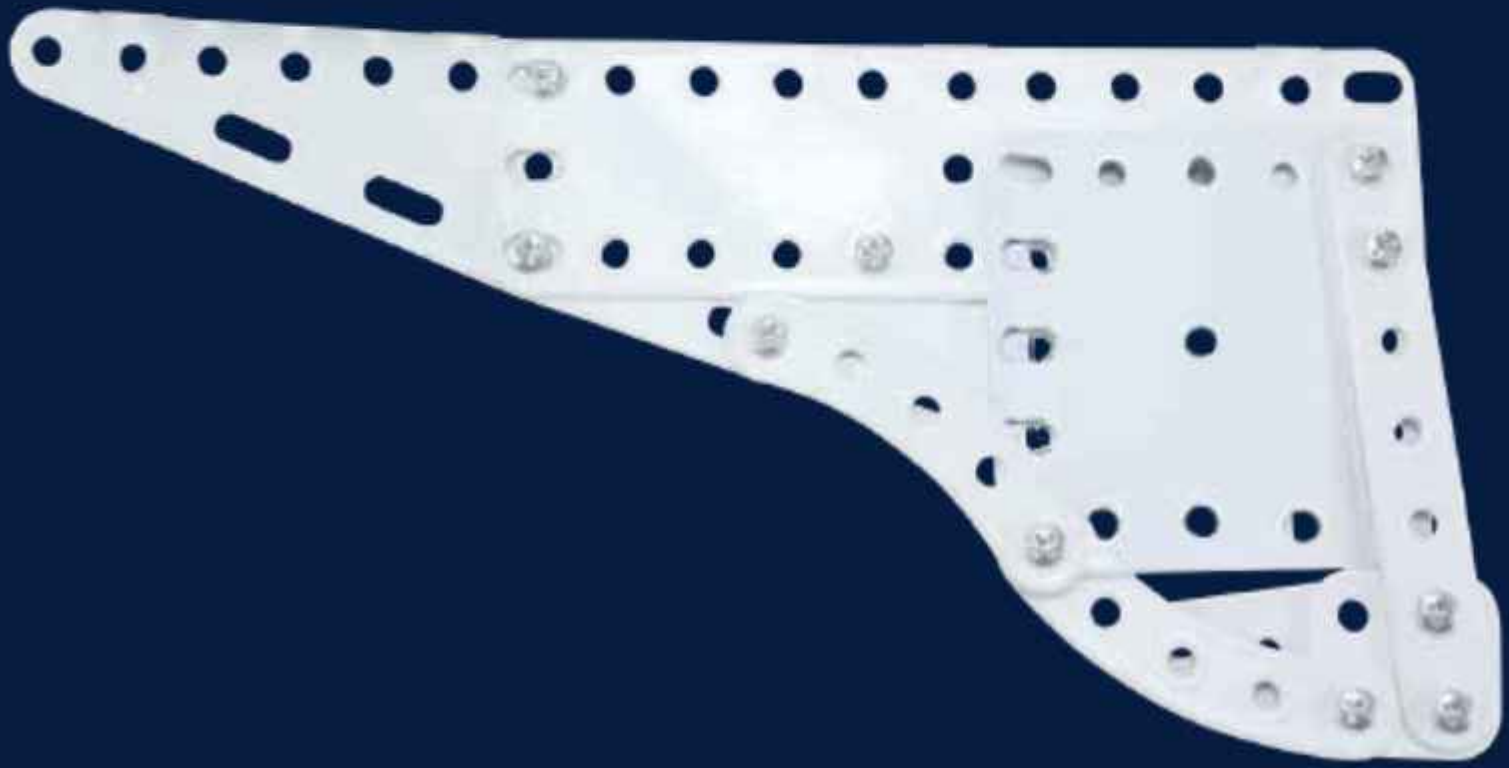

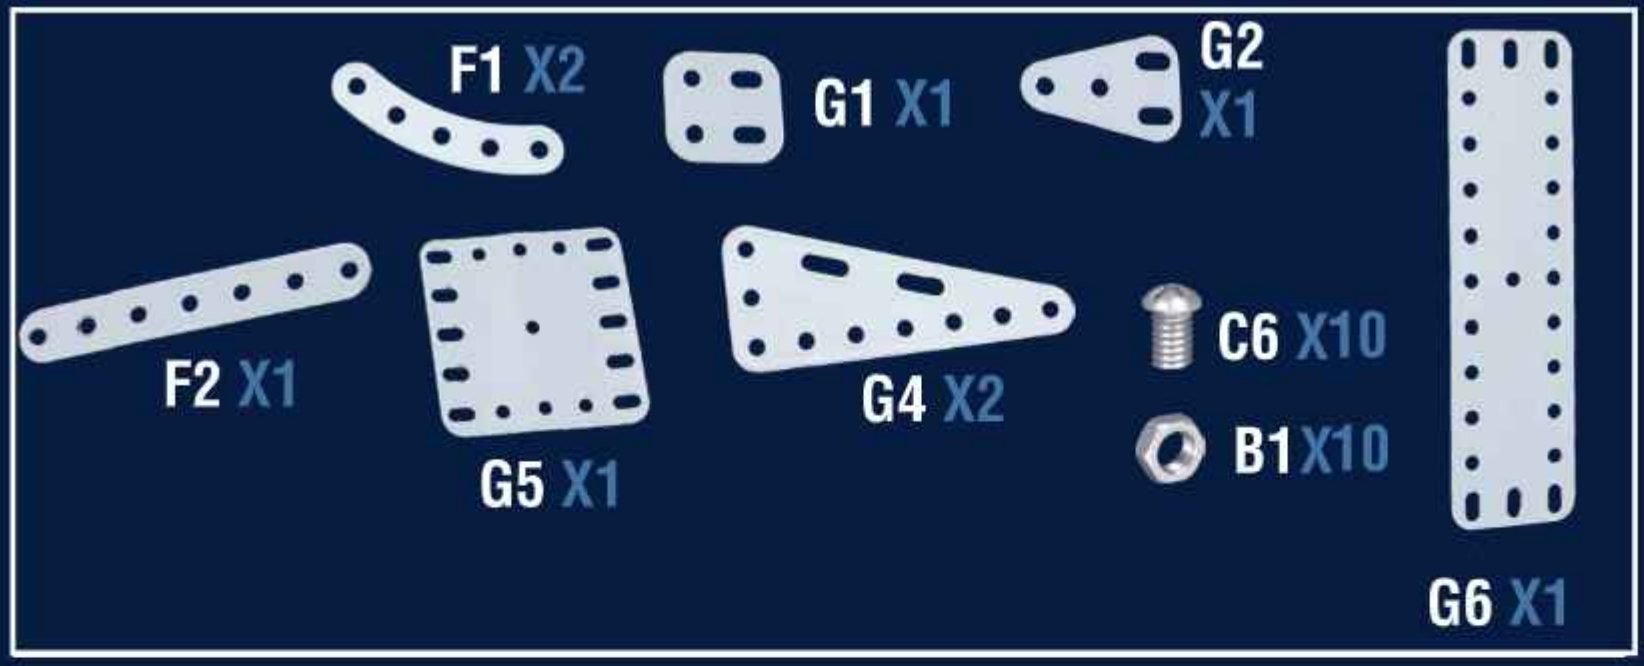
F1 X2
G1 X1
G2
X1
F2 X1
G5 X1
G4 X2
C6 X10
B1 X10
G6 X1

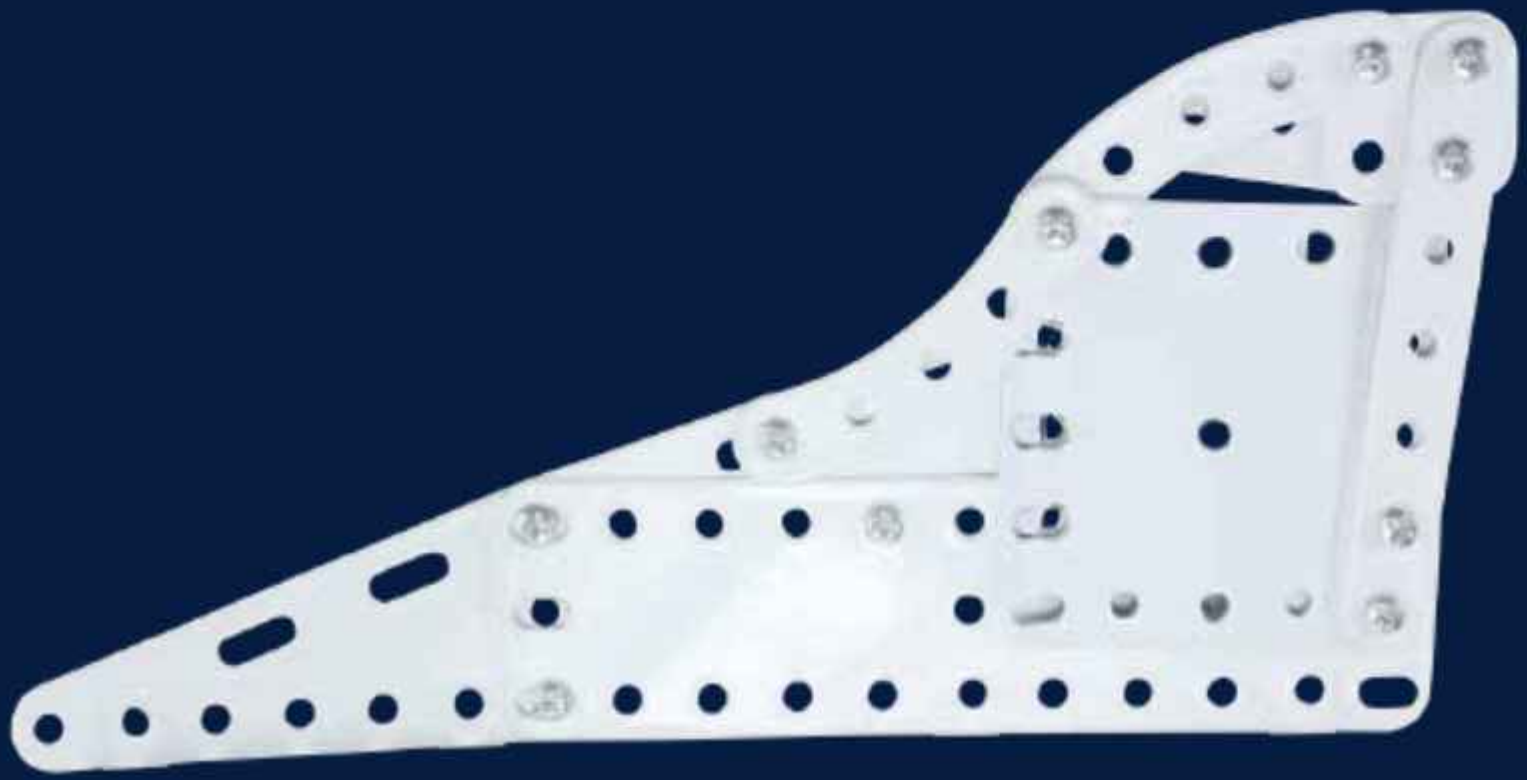



C20 X2




B1
X2



X1

7

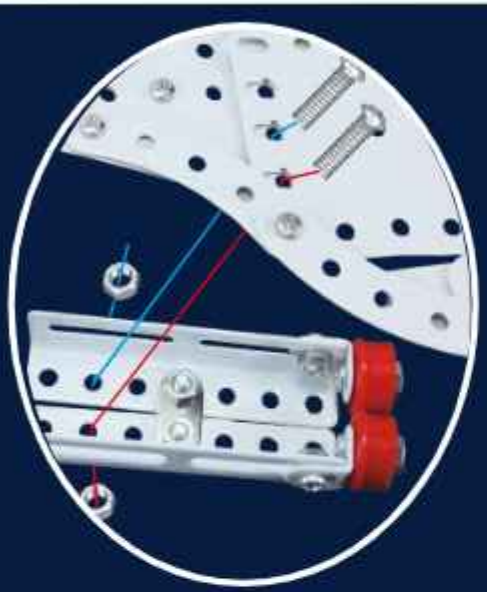





C20 X2



B1
X2



X1

8



9








10



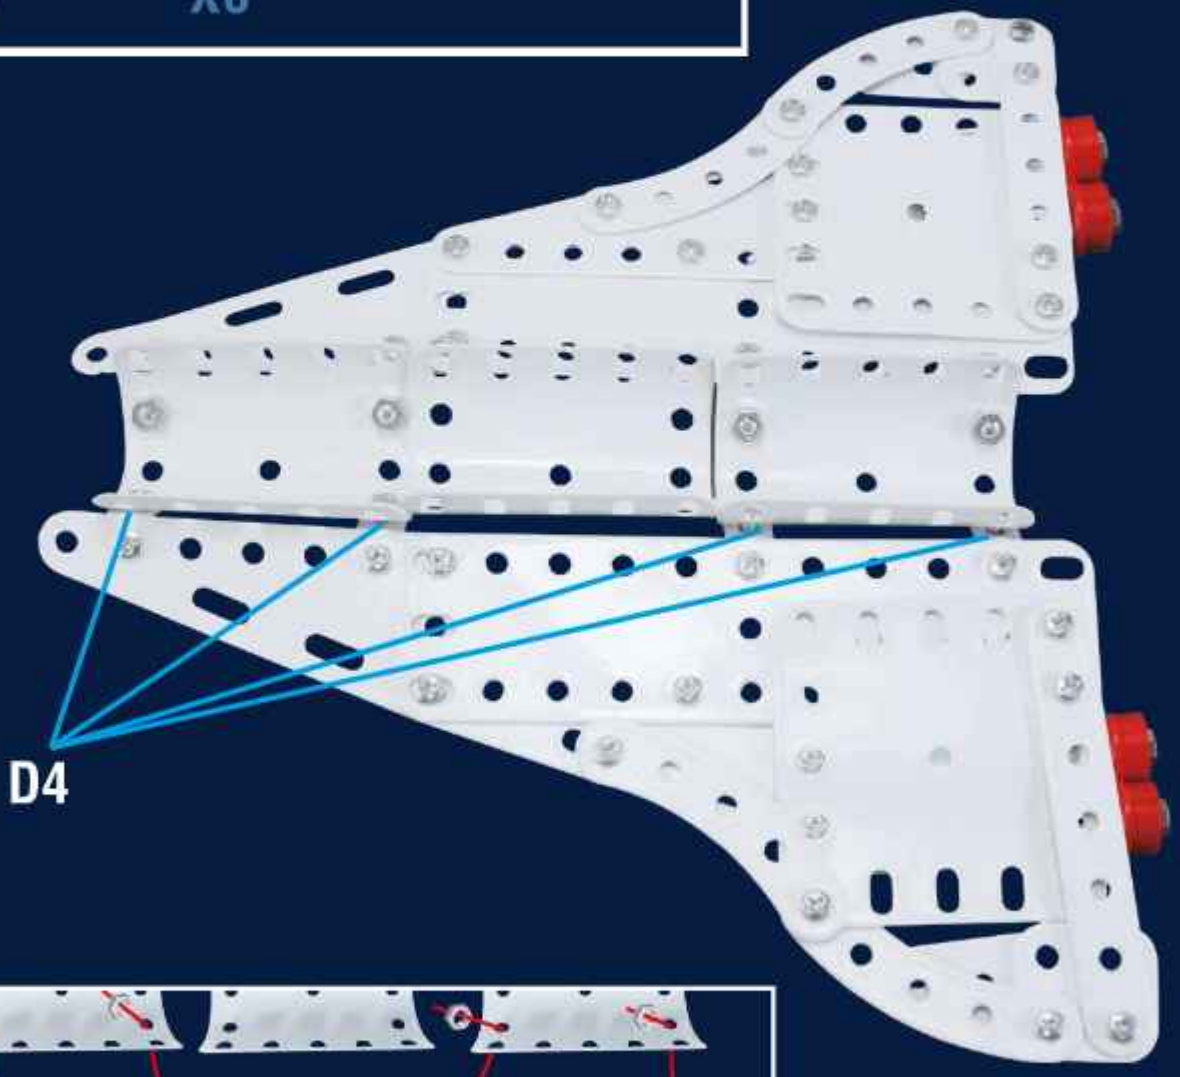




11



Place the x2 F3 pieces between the 3 bottom curved pieces and 3 top curved pieces and fix at the points marked below to secure all pieces. Pull the body together to insert screws. Use screwdriver to align holes.

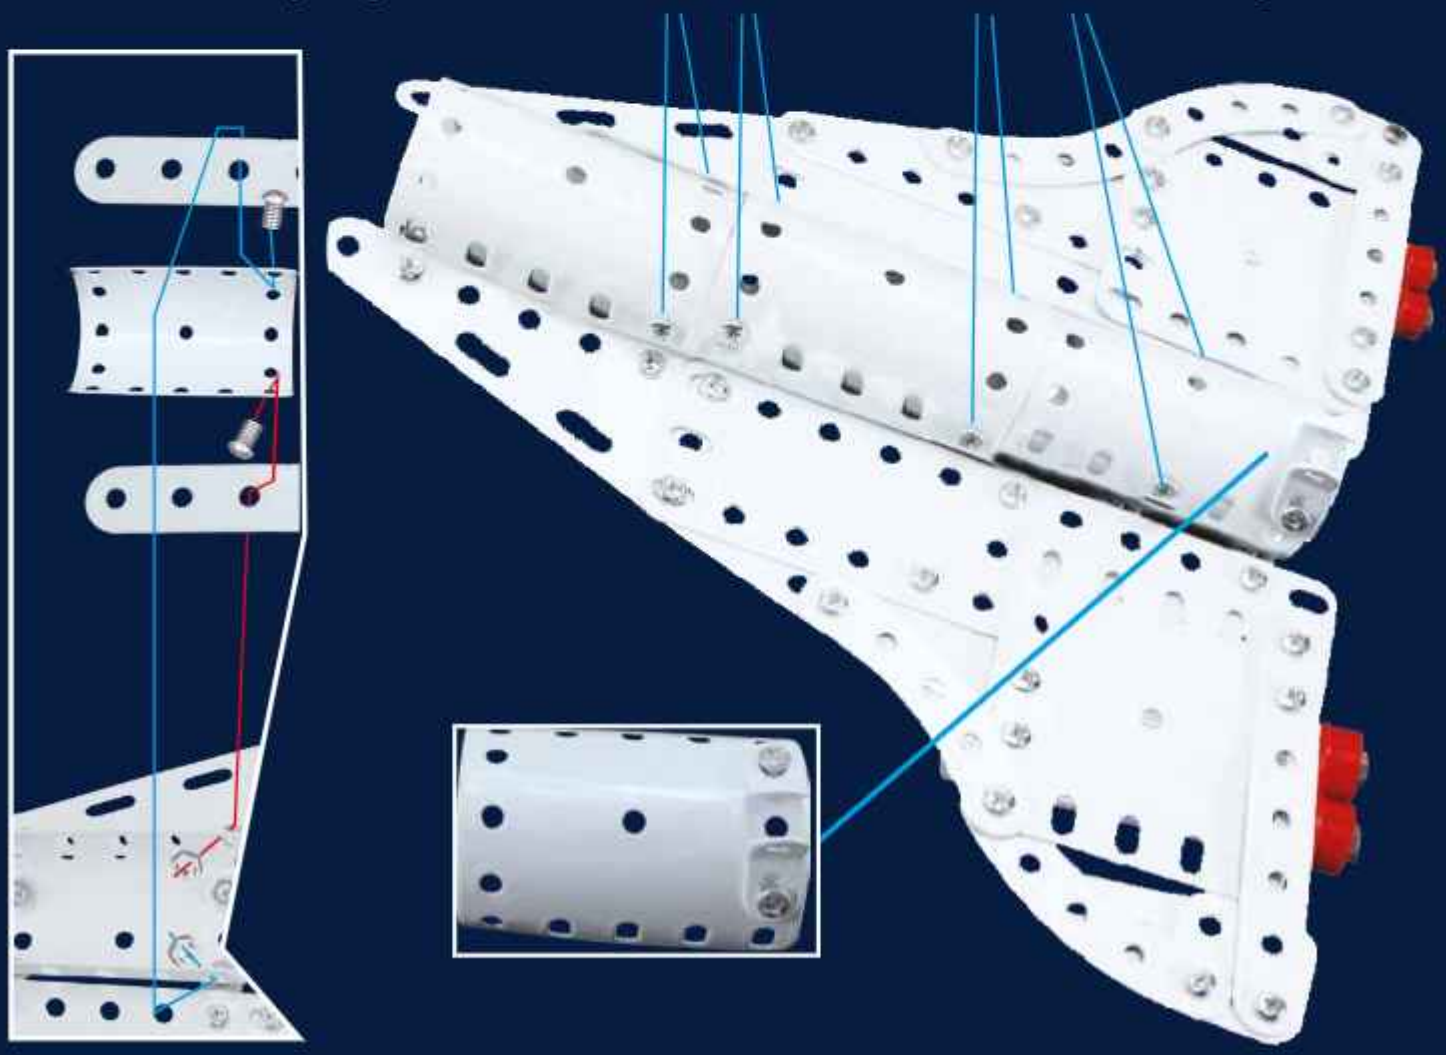



X2

Make two of this step





J2 X1



K2 X2



C30 X1



B1 X2



14



X1



C8

X5



B9


X5





X1



X1

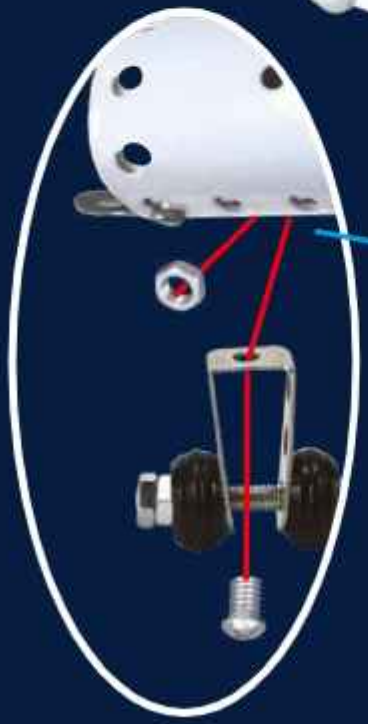

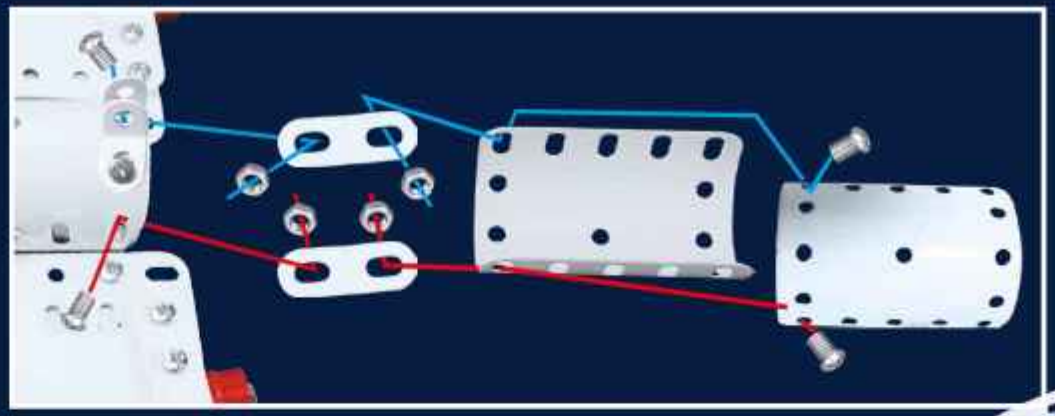

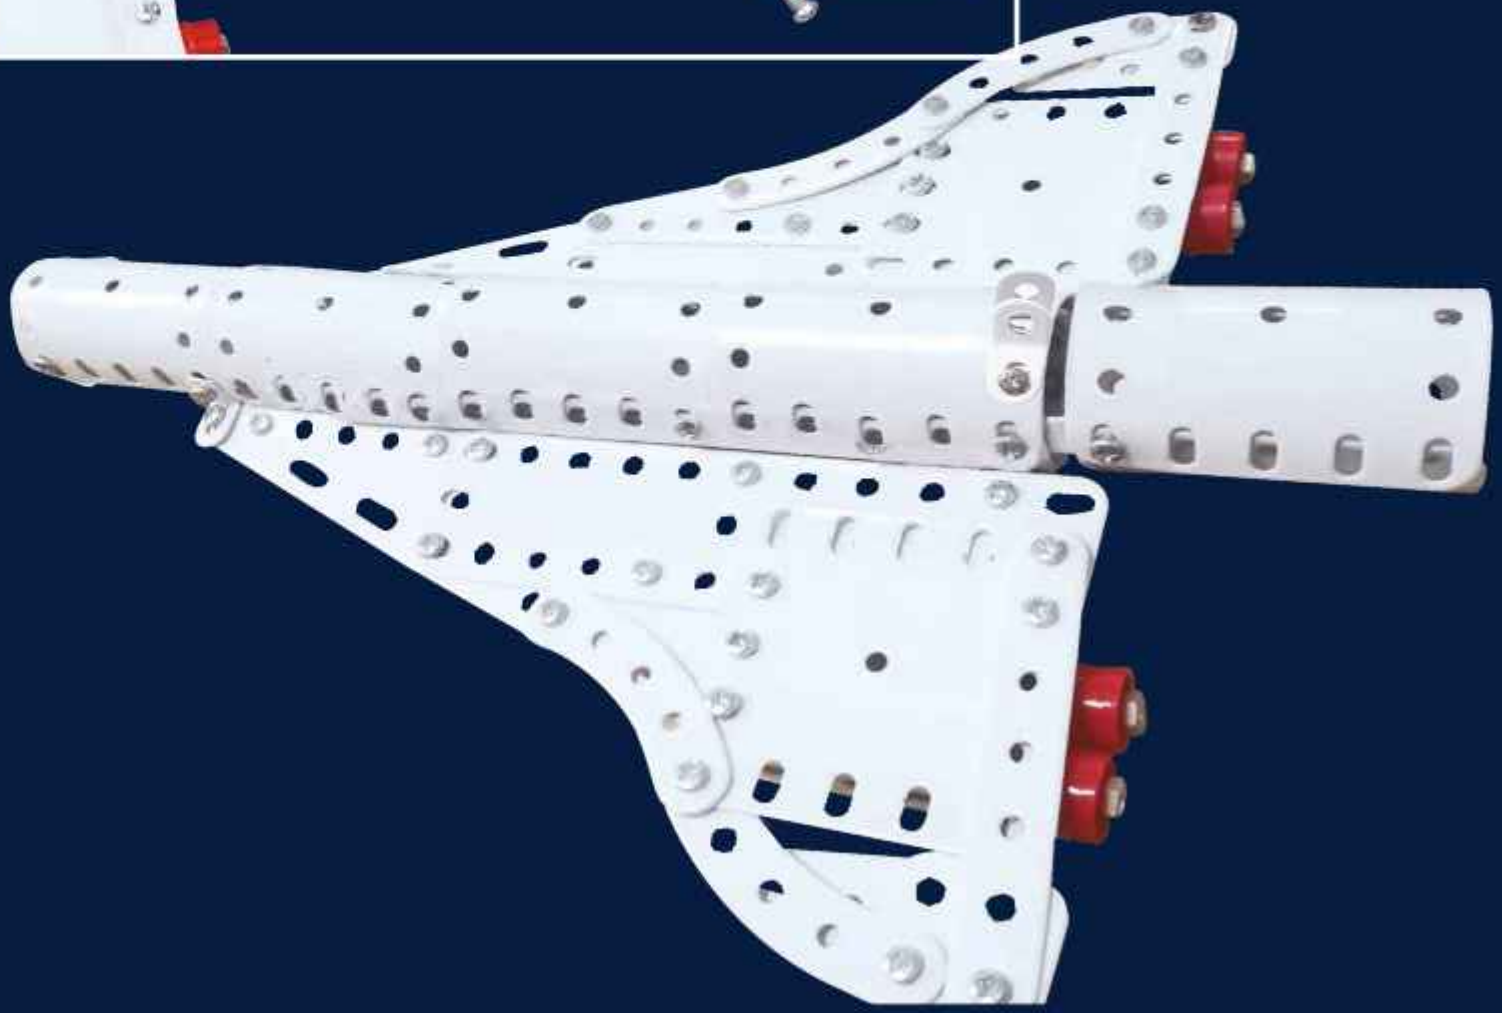

D1 X2

I1 X2

C8 X4

B9 X4

X1


L1 X1

L2 X1


X1



B1 X2



C40 X1


C30 X1



17

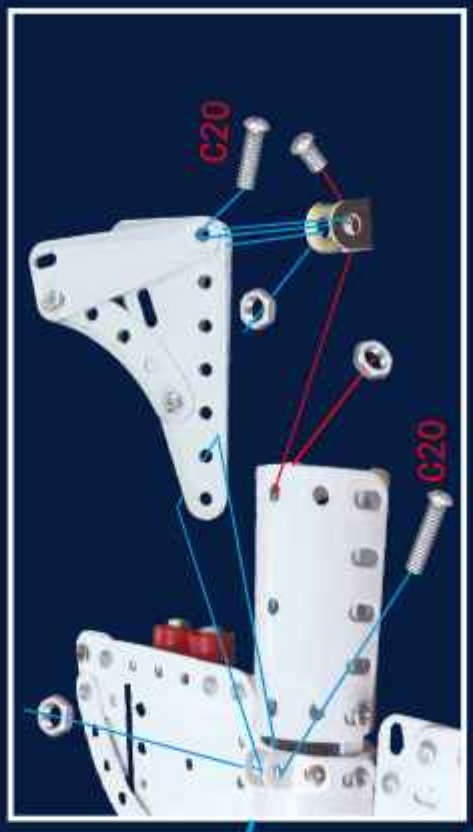

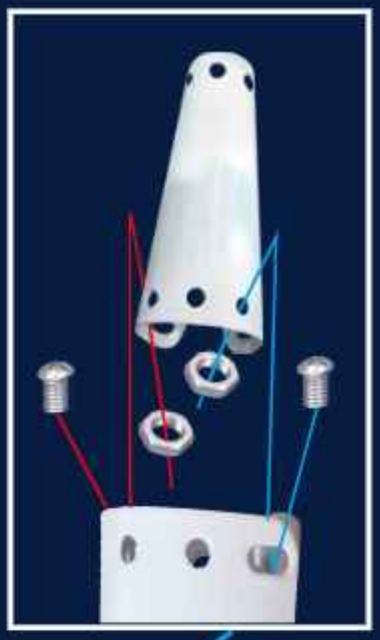



X1
(From Step 1)



L2 X1



J1 X1



C6 X3





C20 X2




B1 X5


C6 X2
B1 X2
X2
X1

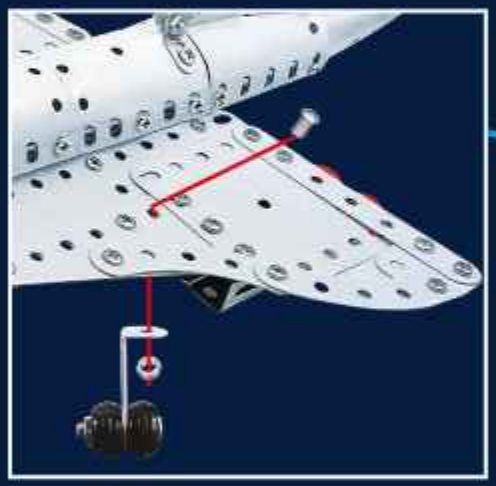

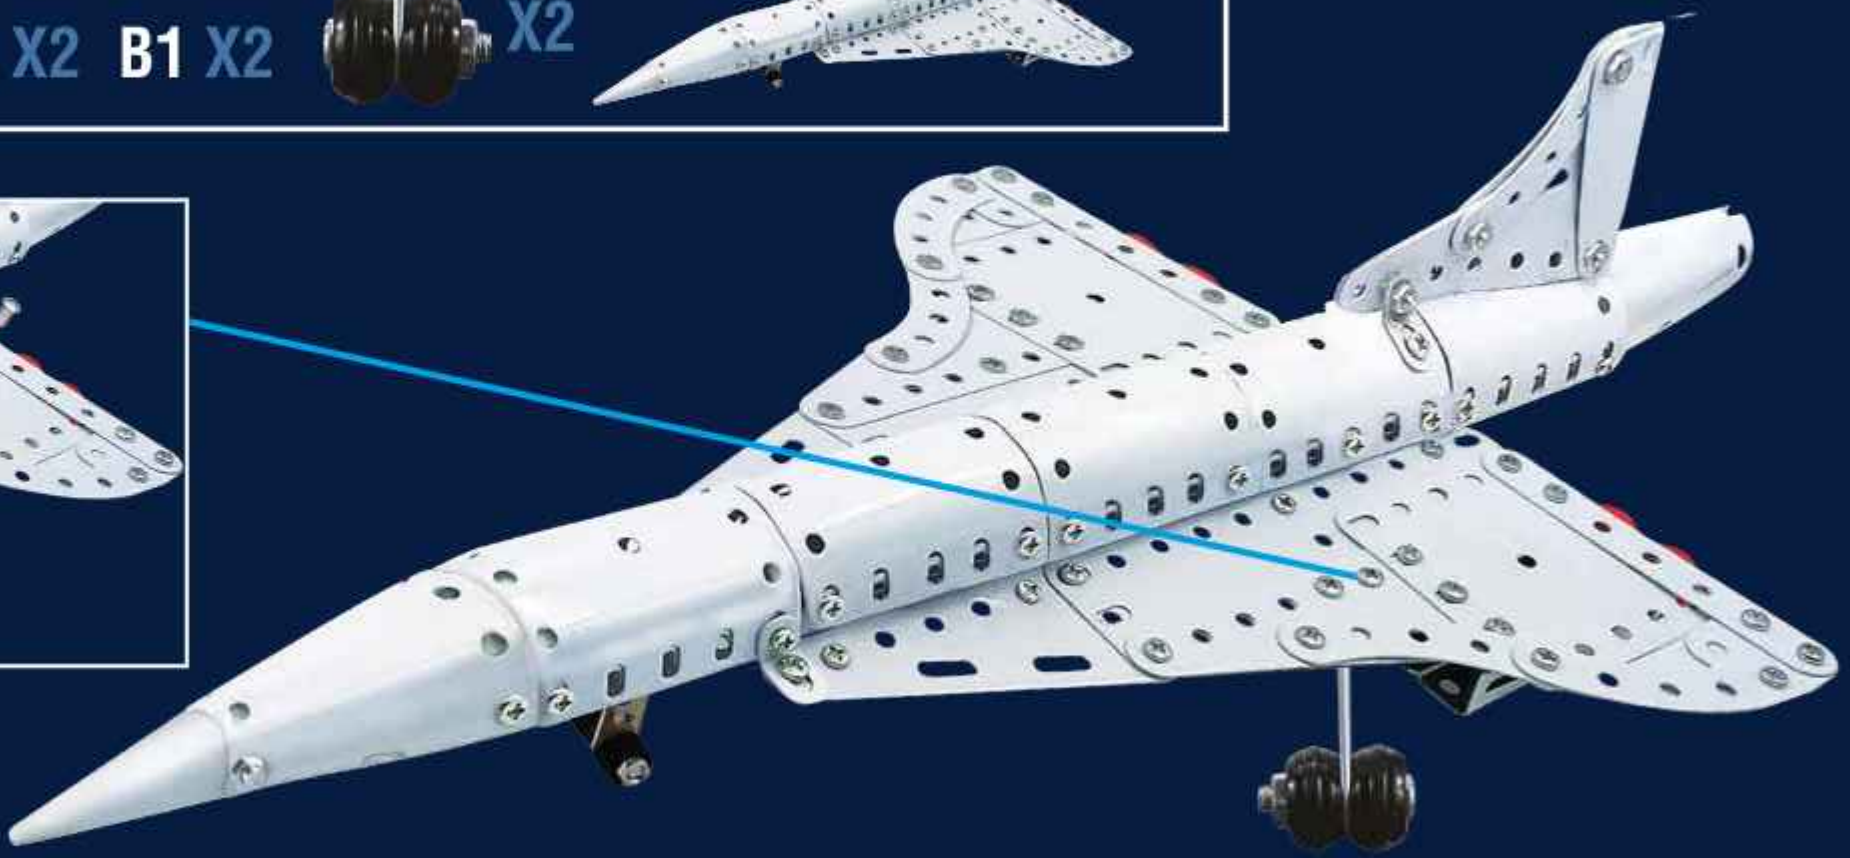

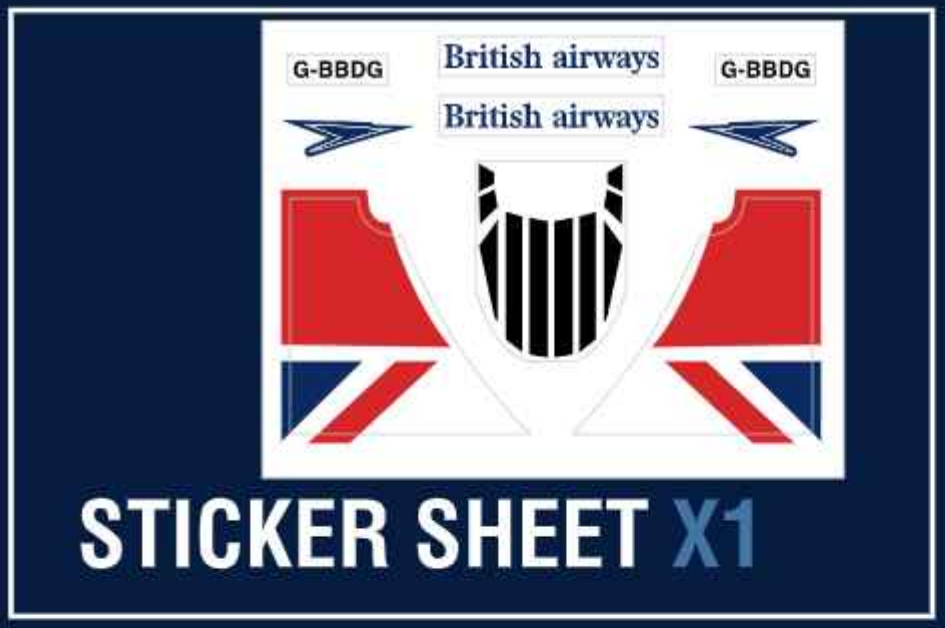

STICKER SHEET X1

